


End Mount Installation Instructions

Duette® and Applause® Honeycomb Shades

UltraGlide®
End Mount
Bracket



Cordlock
End Mount
Bracket



Tension Support
Bracket
(Optional)



HunterDouglas



Getting Started

Use end mount brackets for inside mounts when no other mounting options exist, like Palladian (arch over rectangular) style windows.

Thread And Install The Tension Support Bracket (Cordlock Shades Only)

If the cordlock shade is between 36" and 48" wide, attach a tension support bracket to provide additional support.


- Thread the support cord down through Hole 1.
- Bring the cord up through Hole 2 and then down through Hole 3.
- Pull the end of the cord through the loop and pull the loop closed.
- Pull the end cap out of the headrail.
- Insert the tension support bracket, knot side down, under the edges of the headrail.

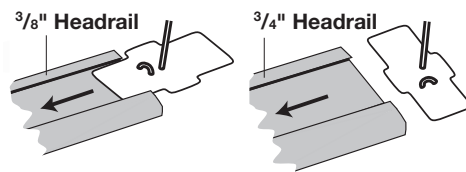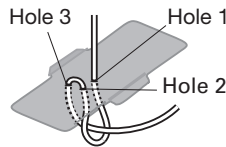


- Move the bracket to the center of the headrail.

Install End Mount Brackets Onto The Headrail Cordlock Shades

- On the end without cords, remove the end cap from the headrail.
- Insert the bracket under the headrail edges.
- Replace the end cap and push the bracket and end cap snugly into the headrail.
- To install bracket on the cordlock side, pull the shade cord to the center of the shade to release the lock, as if lowering the shade.

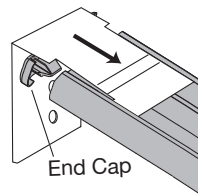


- Pull the cordlock out $\frac{1}{2}$ " and insert the bracket under the headrail edges.
- Place the cordlock back into the headrail and push the bracket and cordlock snugly into the headrail.

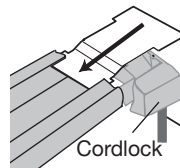

UltraGlide® Shades ($\frac{3}{8}$ " And $\frac{3}{4}$ " Only)

- Remove the end caps from the headrail.
- Insert the brackets under the headrail edges.
- Replace the end caps and push the brackets and end caps snugly into the headrail.

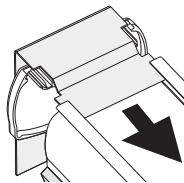

Install The Headrail Into The Window

- Position the fully lowered shade in the window.
- Gently push the fabric away from the bracket to allow access to the bracket screw holes.

NOTE: Be careful not to damage or wrinkle the fabric.

- Secure the brackets to the mounting surface using two screws per bracket.

Cordlock Shades

- If a tension support bracket was installed, attach a screw or hook into the mounting surface directly above the tension support bracket.
- Tie the cord from the tension support bracket to the screw or hook.



HunterDouglas

LIGHT CAN CHANGE EVERYTHING®

hunterdouglas.com

© 2002, 2007 Hunter Douglas Inc.
® Registered trademark of Hunter Douglas Inc.
Patented in the U.S. and foreign countries.
Other U.S. and foreign patents pending.



PCN 5109328000

Rev. 10/07