




Installation Instructions for Insolroll® Universal Chain Guide

Universal Chain Guide is a chain tension device designed for inside or outside mounts.

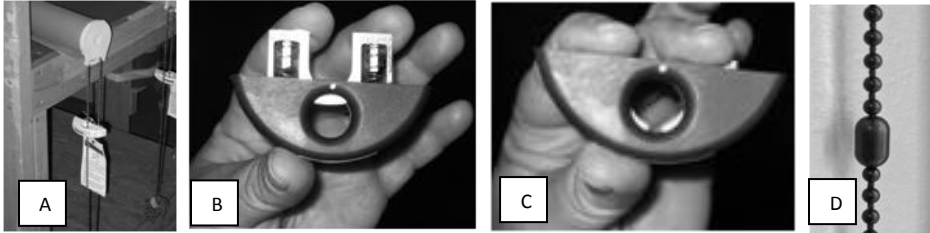

1. Shades come with chain guide attached to shade in a manner that installer must release and install this chain tension device for the shade to be fully operational. (Fig. A)
2. After mounting shade in brackets, squeeze spring/tension mechanism to open (Fig. B,C). This releases tension on chain guide to slide it down to the bottom of the chain loop. #8 self-tapping mounting screws (provided) are designed for installation in wood trim, drywall, or aluminum mullion. Typical mounting conditions below.
3. Push the chain guide against wall at desired location prior to screwing to wall or window frame.
4. Install both screws; spring mechanism will be pushed into the Universal Chain Guide as screws are tightened.
5. Attach chain stops for upper and lower limits of the shade.

Typical Mounting Conditions

Wood Trim or Jamb	Drywall with Stud	Drywall with No Stud Behind	Hollow Aluminum Mullion
<p>wood trim or jamb</p> <p>wood or metal stud behind jamb</p>	<p>drywall</p> <p>metal or wood stud behind drywall</p>	<p>drywall</p> <p>Zip-It® anchor</p> <p>empty space behind drywall</p>	<p>glass</p> <p>hollow aluminum mullion</p> <p>aluminum mullion, interior side</p>
<p>Screw directly into wood trim or jamb. For hardwood trim, pre-drill a 1/16" hole to avoid splitting trim. For applications with metal stud behind, it may be necessary to pre-drill depending upon gauge of stud.</p>	<p>Screw directly into drywall with wood or metal stud behind it. For applications with metal stud behind, it may be necessary to pre-drill depending upon gauge of stud.</p>	<p>Place chain guide at desired location. Mark location for screw anchors. Remove chain guide. Punch hole in drywall and attach anchor to drywall. Screw self-drilling anchor into drywall (Nylon Zip-It wallboard anchor or equal). Place Universal chain guide back into position and mount chain guide with screws into drywall anchors. (Drywall anchor NOT SUPPLIED.)</p>	<p>Place chain at desired location. Mark location for screws and pre-drill a 1/16" hole. Move chain guide back into position and screw into window mullion.</p>

⚠ WARNING

The cords on this product present a potential strangulation hazard.

For child safety, consider cordless alternatives or products with inaccessible cords.



⚠ ADVERTENCIA

Los cordones de este producto representan un peligro potencial de estrangulamiento.

Para la seguridad de los niños, utilice alternativas sin cordón o productos cuyos cordones sean inaccesibles.

For more assistance, contact Insolroll, Inc.
www.insolroll.com 800-447-5534 Rev 6/13